



## FILLING STATION

- Clean the filling station after use.
- First rinse with cold water.
- Next wash with warm water (min. 50 °C / 122 °F) and cleaning agent.
- Rinse with clean water.
- Replace the silicone hose if needed.



## TUBE FEEDER/TEAT AND HOSE

- Clean the tube feeder/teat and hose immediately after use.
- Rinse the tube feeder/teat and hose thoroughly with cold water.
- Wash the tube feeder/teat and hose with warm water and cleaning agent.
- Rinse the tube feeder/teat and hose thoroughly with warm water—preferably 80° C / 176° F.
- Empty any water from the tube feeder/teat and hose.
- The tube feeder/teat and hose, etc., may be placed in the freezer to avoid bacterial growth.
- Replace the silicone tube in the tube feeder as needed.
- Replace the hose between the bag and tube feeder/teat as needed



## THE COLOQUICK UNIT

- Clean the unit as needed.
- Select **"EMPTY TANK"** in the menu.
- When emptying is complete, press the **"OPEN"** button. Then open the lid.
- Switch off the machine.
- Wash with warm water (min. 50 °C / 122 °F) and cleaning agent that is free of abrasives or bleaching agents. Rinse with clean water.
- Turn on the machine. The machine fills with water automatically.

