



## FILLING STATION

- Clean the filling station after use.
- First rinse with cold water.
- Next wash with warm water (min. 50 °C / 122 °F) and cleaning agent.
- Rinse with clean water.
- Replace the silicone hose if needed.



## TUBE FEEDER/TEAT AND HOSE

- Clean the tube feeder/teat and hose immediately after use.
- Rinse the tube feeder/teat and hose thoroughly with cold water.
- Wash the tube feeder/teat and hose with warm water and cleaning agent.
- Rinse the tube feeder/teat and hose thoroughly with warm water—preferably 80° C / 176° F.
- Empty any water from the tube feeder/teat and hose.
- The tube feeder/teat and hose, etc., may be placed in the freezer to avoid bacterial growth.
- Replace the silicone tube in the tube feeder as needed.
- Replace the hose between the bag and tube feeder/teat as needed



## THAWING UNIT

- Clean the unit as needed.
- Switch off the machine by switching the main power switch to OFF, and unplug the unit.
- Empty all water from the water tank and rinse.
- Wash with warm water (min. 50 °C / 122 °F) and cleaning agent that is free of abrasives or bleaching agents. Flush out the cleaning water.
- Fill with clean water (max. 40 °C / 104 °F) up to overflow level.

